

<b>DRUKARKI LASEROWE</b>	
<b>Nazwa</b>	<b>symbol tonera</b>
<b>Hewlett Packard</b>	
Hewlett Packard LJ 4/4M/4MX/5N/5/5M	92298A
Hewlett Packard LJ 4/4M/4MX/5N/5/5M	92298X
Hewlett Packard LJ 4L/4MP/4P/4ML	92274A
Hewlett Packard LJ 5/6P 5MC/5MP/5MV 6MP/6PSE	C3903A
Hewlett Packard LJ 5/6L/6LSE/6LXI 3100/3150	C3906A
Hewlett Packard LJ C3909A/C3909X	5Si
Hewlett Packard LJ1000/1005/1200	C7115A
Hewlett Packard LJ1000/1005/1200	C7115X
Hewlett Packard LJ 1100/3200	C4092A
Hewlett Packard LJ P1005/1006	CB435A
Hewlett Packard LJ P1005/1006 starter	CB 435A starter
Hewlett Packard LJ LJM1120/M1522/P1505	CB436A
Hewlett Packard LJ LJM1120/M1522/P1505 starter	CB 436 starter
Hewlett Packard LJ 1010/1012/1015/3015/3020	Q2612A
Hewlett Packard LJ 1010/1012/1015/3015/3020 chiński	Q2612A chiński
Hewlett Packard LJ 1150	Q2624A
Hewlett Packard LJ 1102	CE285A
Hewlett Packard LJ 1102 starter	CE285A starter
Hewlett Packard LJ 1160/1320	Q5949A
Hewlett Packard LJ 1160/1320	Q5949X
Hewlett Packard LJ 1300	Q2613A
Hewlett Packard LJ 1300	Q2613X
Hewlett Packard LJ 1566/1606	CE278A
Hewlett Packard LJ 1566/1606 starter	CE278A starter
Hewlett Packard LJ 2015	Q7553A
Hewlett Packard LJ 2015	Q7553X
Hewlett Packard LJ 2055	CE505A
Hewlett Packard LJ 2055	CE505X
Hewlett Packard LJ 2100	C4096A
Hewlett Packard LJ 2300	Q2610A
Hewlett Packard LJ 2410/2420/2430	Q6511A
Hewlett Packard LJ 2410/2420/2430	Q6511X
Hewlett Packard LJ 1500/2500	C9700-04
Hewlett Packard LJ 2550	Q3960-64/ Q3971-73
Hewlett Packard LJ 1600/2600	Q6000-Q6003
Hewlett Packard LJ 3000	Q7560-63
Hewlett Packard LJ 3005/3035	Q7551A
Hewlett Packard LJ 3005/3035	Q7551X
Hewlett Packard LJ P3010/P3015	CE255A
Hewlett Packard LJ P3010/P3015	CE255X
Hewlett Packard LJ 3500/3700	Q2670-73/Q2681-83
Hewlett Packard LJ 3600/3800	Q6470-73/Q7581-83
Hewlett Packard LJ 4000/4050	C4127A
Hewlett Packard LJ 4000/4050	C4127X
Hewlett Packard LJ 4014/4015	CC364A
Hewlett Packard LJ 4014/4015	CC364X
Hewlett Packard LJ 4100	C8061X
Hewlett Packard LJ 4100	C8061A
Hewlett Packard LJ 4200	Q1338A
Hewlett Packard LJ 4300	Q1339A
Hewlett Packard LJ 4250/4350	Q5942A
Hewlett Packard LJ 4250/4350	Q5942X
Hewlett Packard LJ 4345	Q5945A/X
Hewlett Packard LJ 4500	4191-4195
Hewlett Packard LJ 4600/4650	C9720-23A

Hewlett Packard LJ 4700	Q5950-53
Hewlett Packard LJ 4730	Q6460-63
Hewlett Packard LJ5000DN/5100	C4129X
Hewlett Packard LJ 5025	Q7570A
Hewlett Packard LJ 5200	Q7516A
Hewlett Packard LJ5500/5550	C9730-33A
Hewlett Packard LJ 8100 /8150	C4182X
Hewlett Packard LJ CP 1025NW	CE310 / 126A
Hewlett Packard LJ CP 1025NW starter	CE 310/126A starter
Hewlett Packard LJ CP 1525	CE 320/128A
Hewlett Packard LJ CP 1525 starter	CE 320/128A starter
Hewlett Packard LJ CP 1210/1510/4014/4015	CB540-543
Hewlett Packard LJ CP 1210/1510/4014/4015 starter	CB540-543 starter
Hewlett Packard LJ CP 2020/2025	CC530-533
Hewlett Packard LJ CP 2020/2025 starter	CC530-533 starter
Hewlett Packard LJ CP 3525/3530	CE250X
Hewlett Packard LJ CP 3525/3530	CE250-CE253
Hewlett Packard LJ CP 4025/4525	CE 260 X
Hewlett Packard LJ CP 4025/4525	CE 260-263A
Hewlett Packard LJ CP 4005	CB400-03
Hewlett Packard LJ CP 6015/6030	CB380-83
Hewlett Packard LJ 8500	4149-4152
Hewlett Packard LJ 9000/9040/9050	C8543X
Hewlett Packard LJ CP 5225	CE 740-743
Hewlett Packard LJ CP 5525	CE 270-273
Hewlett Packard LJ M 4555	CE 390A
Hewlett Packard LJ M 4555	CE 390 X
Hewlett Packard LJ 507 A/X	CE 400-403
Hewlett Packard LJ 305 A/X	CE 410-413
Hewlett Packard LJ 646 A/X	CF 031-033 A, CE 264
Hewlett Packard LJ PRO 400	CF 280 A
Hewlett Packard LJ PRO 400	CF 280 X
Hewlett Packard LJ CF 131A/X	CF 210-213 A/X
<b>Samsung</b>	
Samsung ML 1010/1020/1210/1220/1250	ML1210
Samsung ML 1510/1710/1750	ML1710D3
Samsung ML 1520	ML1520D3
Samsung ML 1610/2510/2571	ML1610D2
Samsung ML 1610/2510/2571 starter	ML 1610D1 starter
Samsung ML 1630	ML1630
Samsung ML 1640/2240	MLTD1082S
Samsung ML 1640/2240 starter	MLTD108S starter
Samsung ML 1660/SCX 3200	ML-D1042
Samsung ML 1910/SCX 4600	MLTD1052S/L
Samsung ML 1910/SCX 4600 starter	MLT-D 105 starter
Samsung ML 2010/2510/2570	ML2010D3
Samsung ML 2010/2510/2570 starter	ML2010 D1 starter
Samsung ML 2150	ML2150D8
Samsung ML 2250/2251	ML2250D5
Samsung ML 2550/2551/2552	ML2550DA
Samsung ML 2850	ML2850B
Samsung ML 2850 starter	ML2850A/E starter
Samsung ML 3050	ML3050A/B
Samsung ML 3470D/3471	MLD3470A/B
Samsung ML 3560	ML3560D6
Samsung ML 4550/4551	ML4550A/B
Samsung ML 3310/3710	ML 205 L
Samsung ML 3310/3710 starter	ML 205S starter
Samsung SCX 4100	SCX4100D3

Samsung SCX 4200	SCX4200D3
Samsung SCX 4216	SCX4216D3
Samsung SCX 4300	MLTD1092S
Samsung SCX 4521	SCX4521D3
Samsung SCX 4521 starter	SCX4521D1 starter
Samsung SCX 4720	SCX4720D3
Samsung SCX 4725	SCX4725D3
Samsung SCX 4824/4828	MLTD2092S/L
Samsung SCX 4824/4828 starter	MLTD209 starter
Samsung SCX 5530/5535	SCX5530A/E
Samsung SCX 6320	SCX 6320 D8
Samsung SCX 6320 DRUM	SCX 6320 R2 DRUM
Samsung SCX 5635	MLTD 2082 S/ L
Samsung CLP 300	CLP 300CMYK
Samsung CLP310/315	CLT4092S CMYK
Samsung CLP 320	CLT4072S CMYK
Samsung CLP 360	CLP 406S CMYK
Samsung CLP500/550	CLP500/550 CMYK
Samsung CLP510	CLP510 CMYK
Samsung CLP600/650	CLP600 CMYK
Samsung CLP 610/660	CLP 660 CMYK
Samsung CLP 620/670	CLT 5082 CMYK
Samsung CLP 770	CLT 6092 CMYK
Samsung CLP 680	CLT 506 CMYK
Samsung CLP 415/470	CLT 504 CMYK
Samsung ML 2160/ SCX 3400	MLTD 101
Samsung ML 2950	MLTD 103
Samsung ML 5010/4510	MLTD 307
Samsung ML 5510/6510	MLTD 309
Samsung ML 6555/SCX 6545	MLTD 106
Samsung ML 6555/SCX 6546 DRUM	MLTD 106 DRUM
<b>Lexmark</b>	
Lexmark Optra C500	C500H2KG CMYK
Lexmark Optra C510	20K0500/1/2/3 CMYK
Lexmark Optra C 522/524	C 522 CMYK
Lexmark Optra C 522/524 DRUM	C 522 CMYK DRUM
Lexmark Optra C 540/544	C 540 CMYK
Lexmark Optra C 720	C 720 CMYK
Lexmark Optra C 734/736	C 734 CMYK
Lexmark Optra C 752/762/770/772	C 770 CMYK
Lexmark Optra C 780	C 780 CMYK
Lexmark Optra C910	C 910 CMYK
Lexmark Optra C910 DRUM	C 910 CMYK DRUM
Lexmark Optra C920	C920 CMYK
Lexmark Optra C930/935	C 930 CMYK
Lexmark Optra C930/935 DRUM	C 930 CMYK DRUM
Lexmark Optra E	69G8256
Lexmark Optra E120	12016SE
Lexmark Optra E120 DRUM	12026XW DRUM
Lexmark Optra E210	10S0150
Lexmark Optra E220	12S0300-400
Lexmark Optra E230/232/240/330/332/340/342	12A8300-8400
Lexmark Optra E 230/232/240/330/332/340/342 DRUM	12A8302 DRUM
Lexmark Optra E250	E25011E
Lexmark Optra E250/350/352/450 DRUM	E250X22G DRUM
Lexmark Optra E260/360/460	0E260A11E/A21E
Lexmark Optra E260/360/460 DRUM	0E260X22G DRUM
Lexmark Optra E310/312	12A2202
Lexmark Optra E320/322	08A0475/76/77/78
Lexmark Optra E321/323	12A7300/7305/7400

Lexmark Optra E350/352	E352H11E/H22E
Lexmark Optra E450	E450A11E/H11E
Lexmark Optra S	1382620/2625/2920/2925/2929
Lexmark Optra T 420	12A7310/7315/7410/7415
Lexmark Optra T 430	12A8320/8325/8420/8425
Lexmark Optra T 520/522-X520/522	12A6730/6735/6830/6835/6839
Lexmark Optra T 610/612/614/616	12A5740/5745/5840/5845/5849
Lexmark Optra T 620/622	12A6760/6765/6860/6865/6869
Lexmark Optra T 630/632/634	12A7360/7362/7460/7462/7468
Lexmark Optra T 640/642	64016SE/HE-64036HE/SE
Lexmark Optra T 644	64416XE-64036XE
Lexmark Optra T650/652/654	T650H11E/H21E/A11A/A21A
Lexmark Optra W812	14K0050
Lexmark Optra W820	12B0090
Lexmark Optra W820 DRUM	12B0090 DRUM
Lexmark Optra W840	W840020H
Lexmark Optra W840 DRUM	W840020H DRUM
Lexmark X215	18S0090
Lexmark X 850	X 850 E
<b>Brother</b>	
Brother HL2700CN/MFC9420	TN04 CMYK
Brother HL4040/4050/4070 DCP9040/9045	TN130/135 CMYK
Brother HL 4040 Bęben	DR 130/135
Brother HL3040/3070/MFC9010/9120/9320	TN230 CMYK
Brother HL3040/3070/MFC9010/9120/9320 DRUM	DR 230
Brother DCP-9055CDN / 9270CDN	TN 320/325 CMYK
Brother HL 4570	TN 328 CMYK
Brother DCP-9055CDN / 9270CDN DRUM	DR 320
Brother HL2030/2040/2070	TN2000
Brother HL2030/2040/2070 DRUM	DR2000
Brother HL2035/2037	TN2005
Brother HL2035/2037 DRUM	DR2005
Brother HL 2130	TN 2010
Brother HL2140/2150N	TN2110/TN 2120
Brother HL 2240	TN 2210/2220
Brother HL2140/2150N DRUM	DR2100
Brother HL2240/2250 DRUM	DR2200
Brother HL 5130/5140/50/70	TN3030/3060
Brother HL 5240/5250	TN3130/3170
Brother HL 5130/5140/5150/5170/MFC8440	DR3000
Brother HL 5240/5250 DRUM	DR3100
Brother HL 5340D	TN3230/TN3280
Brother HL 5340D DRUM	DR3200
Brother HL 5470	TN 3330/3380
Brother HL 5470 DRUM	DR 3300
Brother mfc 8950	TN 3390
Brother HL 1030/1240/50/70/8350	TN6300/6600
Brother HL 1030/1240/50/70/8351 DRUM	DR6000
Brother HL 1650/1670N/1850/1870	TN7300/7600
Brother MFC8070/9070/9160/9180 DRUM	DR8000
Brother HL 1650/1670N/1850/1870 DRUM	DR7000
<b>Canon</b>	
Canon LBP 3200, MF 5630	EP-27
Canon Fax FC 21/ 100/ 120/ 128/200/204/210/220/224/230/300	E30
Canon Fax L 60/ 75/ 80/ 90/ 2xx/ 300/ 350/4600/6000/7000/7100	FX3
Canon L 100/120	FX10
Canon PC 1210/1230	M
Canon PC D320/340	T
<b>Epson</b>	
Epson EPL- N 3000	C13S051111

Epson M 2000/2300/2400	C13S050435
Epson EPL-6200/6200L	4518 S050166/7
Epson EPL-6200/6200L DRUM	4519 S051099 DRUM
<b>Dell</b>	
Dell 1100	J9341/J9833
Dell 1130	593-10961
Dell 1600	K4671/P4210
Dell 1700/1710 / E 230/	U5698/Y5007/09/11
Dell 1720 /E250/	PY408/MW558
Dell 1815 /2335	PF656/658
Dell 1500	7Y608
Dell 2330/2350/3330 / E 260	PK492/937/941
Dell S2500	2Y666/667/668/669
Dell 3110/3115	593-10170 CMYK
Dell 5100 CMYK	593-10173
Dell 5210/5310 N	GD531/HG767
Dell 5200/5300N	M2953/N2157
<b>Kyocera</b>	
Kyocera FS 1020D/1020DN	TK18
Kyocera FS 1920	TK 55
Kyocera FS 1016 /1116	TK 110
Kyocera FS 1030	TK120
Kyocera PU 120 DRUM	TK 120 DRUM
Kyocera FS 1300D	TK130
Kyocera FS 1100	TK140
Kyocera FS-1120D	TK 160
Kyocera FS 1370/1320	TK 170
Kyocera FS 2000/3900/4000/4020	TK 310/320/350/360
Kyocera KM 1620/1635/1650/FS 6950	TK 410/435/440/475
Kyocera FS C5015	TK 510
Kyocera FS 5100	TK 540 CMYK
Kyocera FS-C5200	TK 550
Kyocera FS-C5300	TK 560/570
Kyocera FS 5150	TK 580
Kyocera FS 5250	TK 590
Kyocera FS 9130	TK 710/715
<b>Minolta</b>	
Minolta Page Pro 8/1100	4152
Minolta Page Pro 1300/1350/1380/1390	4518
Minolta Page Pro 1300/1350/1380/1390 DRUM	1710568001 DRUM
Minolta Page Pro 1400/1400W	9J04202
Minolta Page Pro 1400/1400W DRUM	4519401 DRUM
Minolta Page Pro 1600	4152613 CMYK
Minolta Page MagiColor 2300/2350	4576 CMYK
Minolta Page MagiColor 2400/2430	1710589-008 CMYK
Minolta Page MagiColor 5430	1710582-008 CMYK
Minolta Page Pro 1480/1490	1480
Minolta Page Pro 4650	4650
<b>Oki</b>	
Oki B2500	09004447 / 09004391
Oki B410/430/440	43979102
Oki B410/430/440 DRUM	43979102 DRUM
OKI B 411	44574602
OKI B 431	44574902
OKI B 411/431 DRUM	44574302 DRUM
OKI C 310/530	44469722 CMYK
OKI 3100/5100	42804540/42804516 CMYK
OKI 3100/5100 DRUM	42804540/42804516 DRUM
OKI C 3300/3400	43459340 CMYK
Oki B4100/4200	TYP 9

Ok! B4100/4200 DRUM	TYP 9 DRUM
OKI B 4400 DRUM	43501902 DRUM
Ok! C5600/5700/5800	43324408 CMYK
OKI C5600/5700/5800 DRUM	43324408 DRUM
Ok! B6100	9004058
Ok! B6200/B6300	09004078 / 09004079
Ok! B 6500	9004461
OKI C 710	44318608 CMYK
OKI 7100/7300/7500	41963008 CMYK
OKI 7100 DRUM	41963008 DRUM
OKI 8600/8800	43449016 CMYK
OKI 9600/9800	42918916 CMYK
OKI 8600/9600 DRUM	42918916 DRUM
<b>Xerox</b>	
Xerox Phaser 3010/3040	106R02182
Xerox Phaser 3100	106R01378
Xerox Phaser 3117/3122/3125	106R01159D3
Xerox Phaser 3119	106R00625
Xerox Phaser 3140	108R00909
Xerox Phaser 3150	109R00746/747
Xerox Phaser 3200	113R00730/35
Xerox Phaser 3250	106R1373/74
Xerox Phaser 3428	106R1245/46
Xerox Phaser 3435	106R01414
Xerox Phaser 3600	106R01370
Xerox Phaser 3635	108R00795
Xerox Phaser 4510	113R00712
Xerox WC 5225/5230	106R01305
Xerox 6125/6128/6130	106R01285 CMYK
Xerox 6180/6280	113R00722 CMYK
Xerox 7400	106R01080 CMYK
Xerox 7760	108R00713 CMYK
Xerox P8E	113R0296
Xerox P1210	106R00441/42
Xerox PE120	13R00606
Xerox M 20	106R01048
<b>Panasonic</b>	
Panasonic UF 744/788	UG 3309
Panasonic UF 505/550/560/770/880/885/895	UG 3313
Panasonic UF 585/595	UG 3350
Panasonic UF490 DRUM	UG 3220
Panasonic UF4100	UG 3221
Panasonic KX FA 84 DRUM	KX FL 513/613/653
Panasonic KX FA 86 DRUM	KX FL 833/813/853/803
Panasonic KX FAT 411	KX MB 2000/2010/2030
Panasonic KX FA 412 DRUM	KX MB 2000/2030/2025
Panasonic KX PDP 8	7100/7105/7110
Panasonic KX FA 78 DRUM	KX FLB 752EX/FL503/FLM522
Panasonic KX FA 93 DRUM	KX MB 773/781/93

<b>2. DRUKARKI ATRAMENTOWE</b>	
<b>Nazwa</b>	<b>symbol tuszu</b>
<b>Hewlett Packard</b>	
Hewlett Packard DJ 400/420/500/510	51626 A/G
Hewlett Packard DJ 600/660/680/690	51629 A/G
Hewlett Packard DJ 330/430/450/650	51640 (40)
Hewlett Packard DJ 710/720/820/850/870/970	51645A/G(45)
Hewlett Packard DJ 656/610/640	6614 (20)
Hewlett Packard DJ 840/845/920/940/810/816	6615D/N(15)
Hewlett Packard DJ 816/817/825/84x	C6625A/D(17)

Hewlett Packard DJ 350	C6628 (19)
Hewlett Packard DJ 920/930/940/950	C6578A/D(78)
Hewlett Packard DJ 710/720/890/895	C1823D/G (23)
Hewlett Packard DJ 5550	C6656A(56)
Hewlett Packard Photosmart 7150/7260/7350	6658 (58)
Hewlett Packard Photosmart 145/245	C9359E(59)
Hewlett Packard DJ 5550	C6657A(57)
Hewlett Packard DJ 3320/3325	C8727A(27)
Hewlett Packard DJ 3320/3326	C8728A(28)
Hewlett Packard 5740/6540/6840	C9362E(336)
Hewlett Packard 5740/6540/6840 C8764G	C9364E(337)
Hewlett Packard 5740/6540/6840 C8764G starter	C9364E(337)starter
Hewlett Packard 5740/6540/6840 C8765G	C8765E(338)
Hewlett Packard 5740/6540/6840 C8765G starter	C8765E(338)starter
Hewlett Packard 5740/6540/6840/8150/8450/2610	C8767E(339)
Hewlett Packard 5740/6540/6840/2710/325/375	C9361E(342)
Hewlett Packard 5740/6540/6840/2710/325/375	C8766E(343)
Hewlett Packard 5740/6540/6840/2710/325/375	C9363E(344)
Hewlett Packard 3920/3940/PCS 1410 C9351	C9351A(21)
Hewlett Packard 3920/3940/PCS 1410 C9351G starter	C9351G(21) starter
Hewlett Packard 3920/3940/PCS 1410	C9351C(21)XL
Hewlett Packard 3920/3940/PCS 1410	C9352A(22)
Hewlett Packard 3920/3940/PCS 1410	C9352C(22)XL
Hewlett Packard PCS 1510/1600/1610	C9369E(348)
Hewlett Packard DJ F4240 czarny	CC640EE/641EE(300)
Hewlett Packard DJ F4240 czarny	CC640EE/641EE (300)XL
Hewlett Packard DJ F4240 kolor	CC643EE/644EE (300)
Hewlett Packard DJ F4240 kolor	CC643EE/644EE (300)XL
Hewlett Packard DJ 105/2050/2050s czarny	CH561-6EE (301)
Hewlett Packard DJ 105/2050/2050s czarny	CH561-6EE (301)XL
Hewlett Packard DJ 105/2050/2050s kolor	CH561-6EE (301)
Hewlett Packard DJ 105/2050/2050s kolor	CH561-6EE (301)XL
Hewlett Packard Office Jet 5780/85	CB335EE (350)
Hewlett Packard Office Jet 5780/85	CB336EE (350)XL
Hewlett Packard Office Jet 5780/85	CB337EE (351)
Hewlett Packard Office Jet 5780/85	CB338EE (351)XL
Hewlett Packard DJ 5460 czarny	CB322EE(364) XL
Hewlett Packard DJ 5460 kolor	CB322EE (364) XL
Hewlett Packard Office Jet J4624/4580/4660/4680 czarny	CC653AE/654AE (901)XL)
Hewlett Packard Office Jet J4624/4580/4660/4680 kolor	CC656AE (901)
Hewlett Packard Office Jet 6000 czarny	CD975 (920)/(920XL)
Hewlett Packard Office Jet 6000 kolor	CD972/73/74 (920)(920XL)
Hewlett Packard Office Jet Pro 8000	C4906-09A (940)/(940XL)
Hewlett Packard DJ F735	CD887/888 (703)
Hewlett Packard Deskjet Ink Advantage 2060	CN692AA (704)
Hewlett Packard Office Jet Pro K5400/550	88 CMYK
hewlett Packard DJ F2100/F4140	CB334AE(54)
Hewlett Packard C9368A/9365A/9360A/CB304A	100,101,102,110
Hewlett Packard Office Jet Pro 8100/8600	CN045AE 950(950XL)
Hewlett Packard DJ 2515/3515	650
Hewlett Packard DJ 3525	655
Hewlett Packard C4844	10
Hewlett Packard C4836/4837/4838	11
<b>Canon</b>	
Canon BJ10/10E/20	BC 01
Canon BJ200/ 210/ 220/ 230 /1000 BJC150/210/220/240/250	BC02
Canon fax B320/340/310	BX2
Canon fax B1xx/ 540/ 550/ 640/ 820/ 840	BX3

Canon fax B340/ 360/ BJC-4xx/ 2xxx/ 4xxx/ 5xxx	BC20
Canon fax B210c/ 215c/ 230c/ 340/ 360/ BJC-2xxx/ 4xxx	BX20
Canon IP 1600/2200/MP 1710 PIXMA 150/170/450	PG 40
Canon IP 1600/2200/MP 1710 PIXMA 150/170/450	PG50
Canon IP 1600/2200/MP 1710 PIXMA 150/170/451	CL 41
Canon IP 1600/2200/MP 1710 PIXMA 150/170/451	CL51
Canon IP 1800/2500	PG 37
Canon IP 1800/2500	CL38
Canon MP240/MP260	PG510/PG512
Canon MP240/MP260	CL511/CL513
Canon Pixma 3600/4600	PGI520/CLI521
Canon Pixma 4850/490/885	PGI 525/CLI 526
Canon Pixma MG3150	PG 540/CL 541
<b>Lexmark</b>	
Lexmark Z700/Z735, X2300/X2350/X2450/70/X3450/70	18C0781(1)
Lexmark X 2480/3580/3480//3580/4580/1380Z1480/738	18C0190(2)
Lexmark X2580, X3580, X4580, Z1380, Z1480	18C1530(3)
Lexmark CJPZ13/Z23/Z25Z33/Z35	10N0016(16)
Lexmark CJPZ13/Z23/Z25Z33/Z35	10N0026(26)
Lexmark CJPZ13/Z23/Z25Z33/Z35	10N0217(17)
Lexmark CJPZ13/Z23/Z25Z33/Z35	10N0227(27)
Lexmark P915/P4350/P6250/P6350/X525/X5450/X5270/ X7170/X8350	18C0032(31)
Lexmark P915/P4350/P6250/P6350/X525/X5450/X5270/ X7170/X8350	18C0032(32)
Lexmark P915/P4350/P6250/P6350/X525/X5450/X5270/ X7170/X8350	18C0033(33)
Lexmark X5250/X3330X/P4350/P6350/X8350/P915	18C0034(34)
Lexmark X5250/X3330X/P4350/P6350/X8350/P915	18C0035(35)
LexmarkX4850/4950	18Y0141E(41)
LexmarkX4850/4951	18Y0142E(42)
LexmarkX6575	18Y0143(43)
Lexmark P350	18y0144(44)
Lexmark P350	18Y0146E(45)
LexmarkZ12/22/32	17G0050(50)
LexmarkZ11/31/45	12A1970/75(70)
Lexmark3200/5000/5700	12A1980/85(80)
LexmarkX5100/5130/6170/6100	18L0032(82)/18L0042(83)
Lexmark1000/1020/1100/2030	13400HC